



Installation Instructions


Mendip Shower Tray

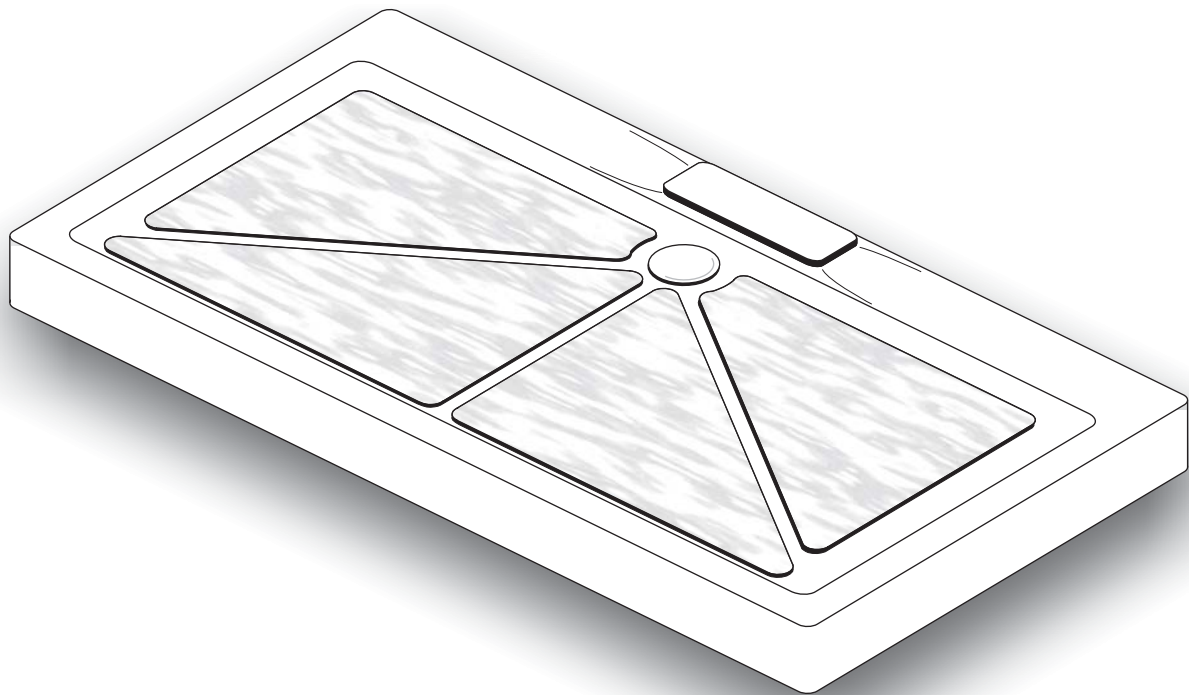

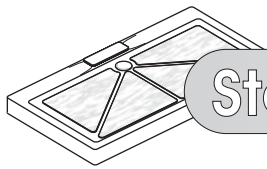

Standard Installation

PARTS

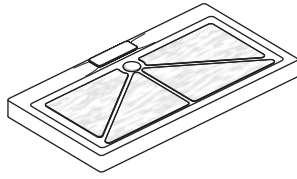


Mendip Shower Tray




**Self-Adhesive
Tiling Strip**



**X2
Fixing Bracket**

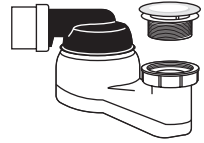


**Shower Waste
Trap**

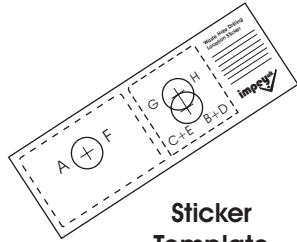

**Sticker
Template**



**X 4
Raw Plugs**













**X 4
2x8mm
Wall screws**



**X 4
3/4x8mm
Self tapping
screw**



Mendip Shower Tray
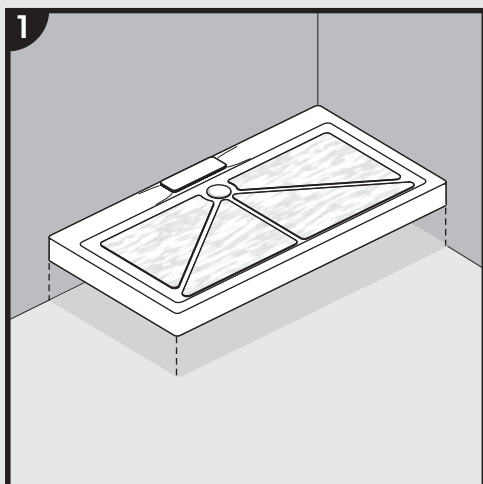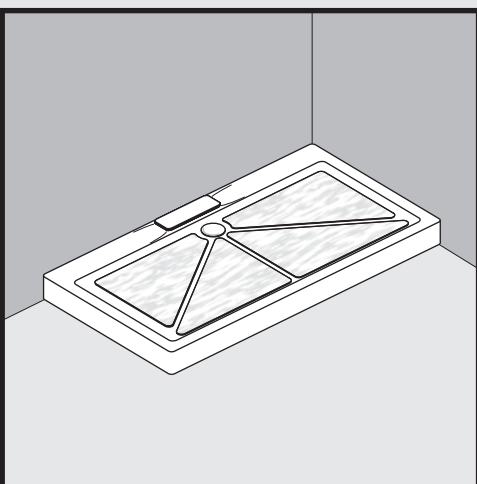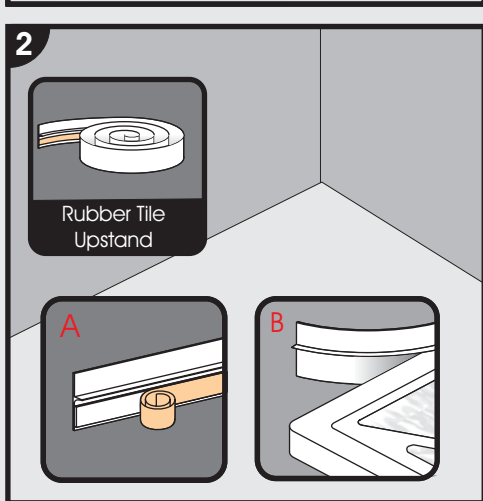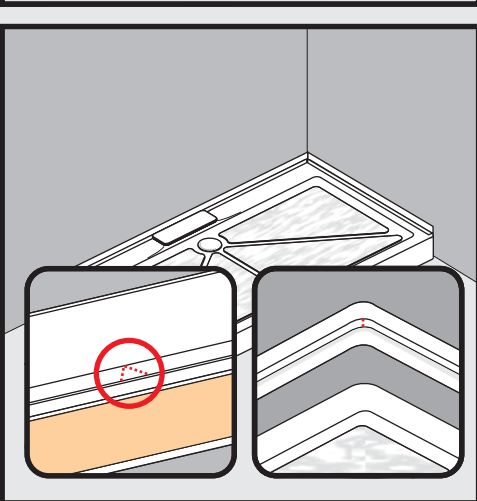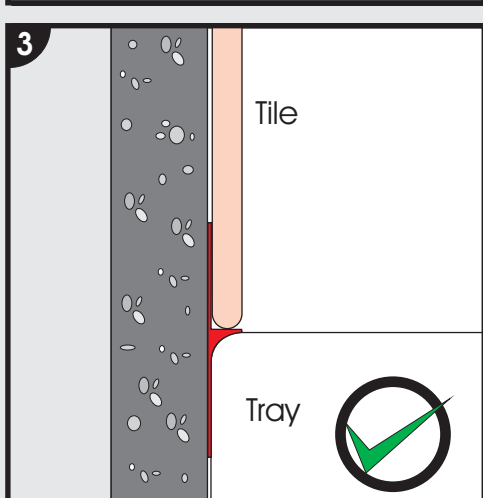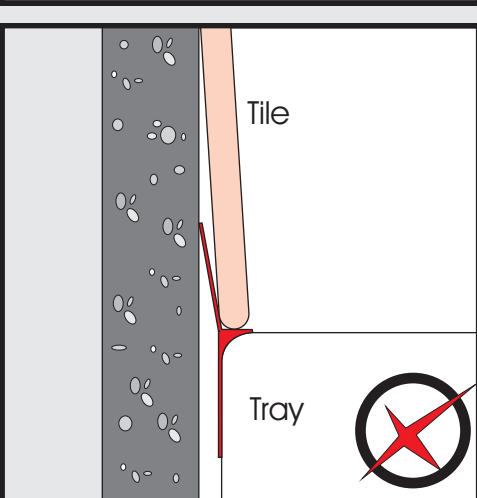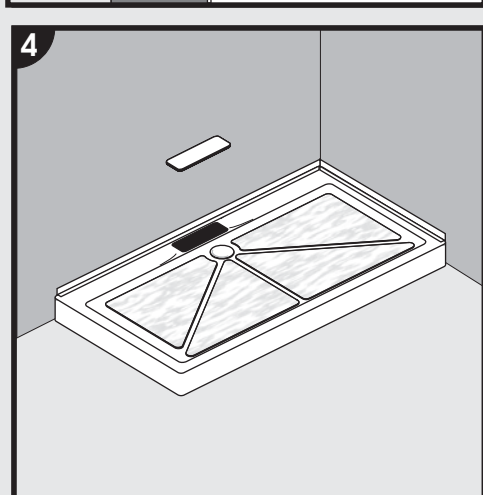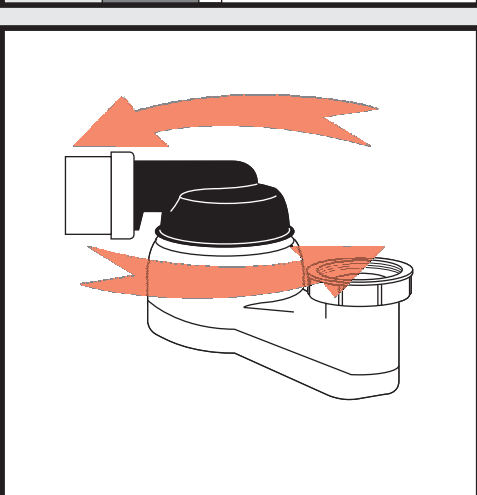
<p>1</p> 		<p>Determine which corner the Mendip tray is to be fitted into.</p> <p>This will establish which edges need to have the self adhesive tile upstand attached to them.</p>
<p>2</p> 		<p>A. Remove the orange paper from the rubber tile upstand to reveal the self adhesive section.</p> <p>B. Attach the rubber tile upstand to the appropriate edges of the tray.</p> <p>To wrap the rubber tile upstand around a corner, cut a 90i Triangle out of the upstand as shown.</p>
<p>3</p> 		<p>Ensure that the rubber upstand is parallel to the wall when the tray is fitted into place.</p> <p>If the upstand can not be fitted parallel to the wall, you will need to remove plaster as necessary.</p>
<p>4</p> 		<p>Remove the access cover to enable better access for fitting the trap.</p> <p>Determine which direction the waste pipe will run and twist the swivel outlet of the trap in the appropriate direction.</p>

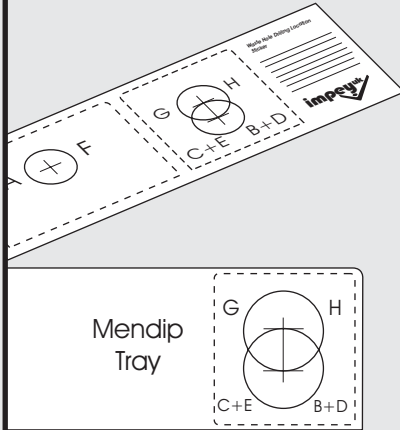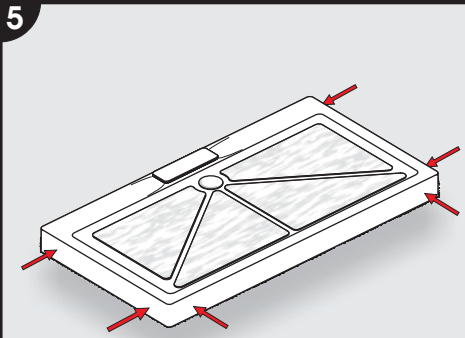



Determine on which face of the tray the waste pipe will exit, refer to the waste pipe hole drilling guide on page 5 and sticker sheet.

Cut out the appropriate sticker and apply to the required position on the tray.

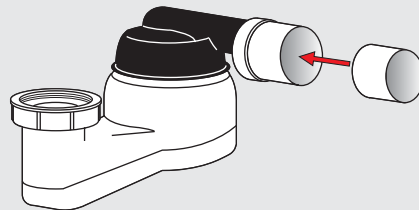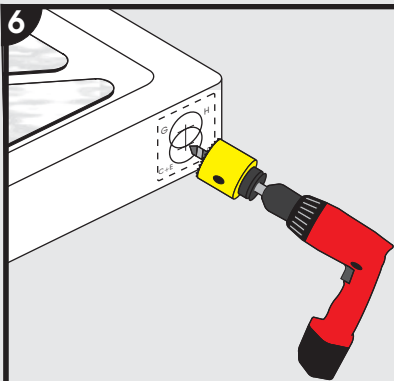



Using a 45mm-50mm hole saw, drill the waste pipe hole in the side of the tray.

Fit the waste pipe to the trap using solvent weld and route the pipe under the tray so that it exits through the previously drilled hole.

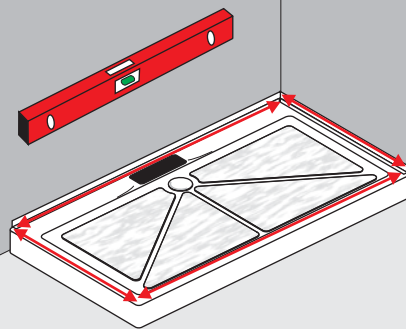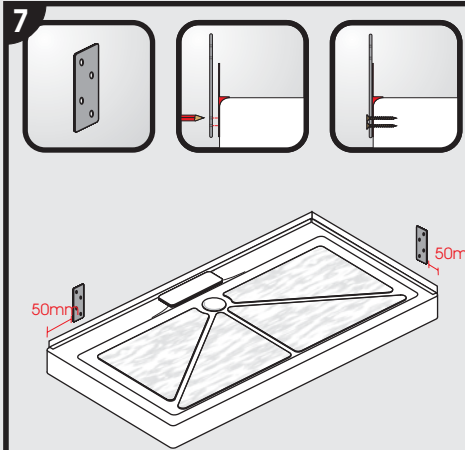

Offer the fixing brackets into place (this is approximately 50mm in from the corner of the tray) and using the bracket as a template mark the holes and drill with a 3mm drill bit.

Place the tray in position again and check that it is level on all 4 sides with a spirit level. If it is not pack it up as necessary. It may also be necessary to remove some wall plaster to accommodate the wall brackets.

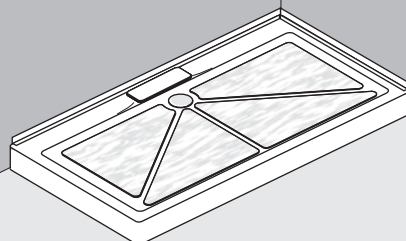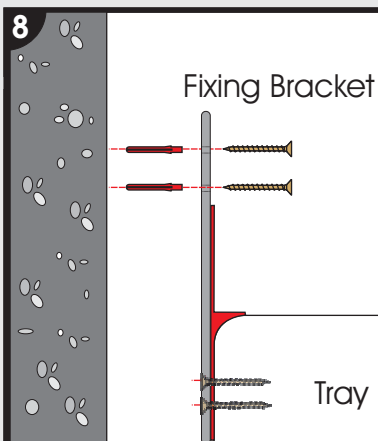

Drill and fix the tray through the brackets using the screws and raw plugs provided.



Finally connect the waste pipe either to existing waste or connect to a soil stack. Before refitting the access cover please check the water tightness of all joints under the tray.

Refit the access cover and fit the chrome waste mushroom

Tile the walls in an approved manner to complete installation.

Waste Pipe Drilling Positions

Please refer to sticker template

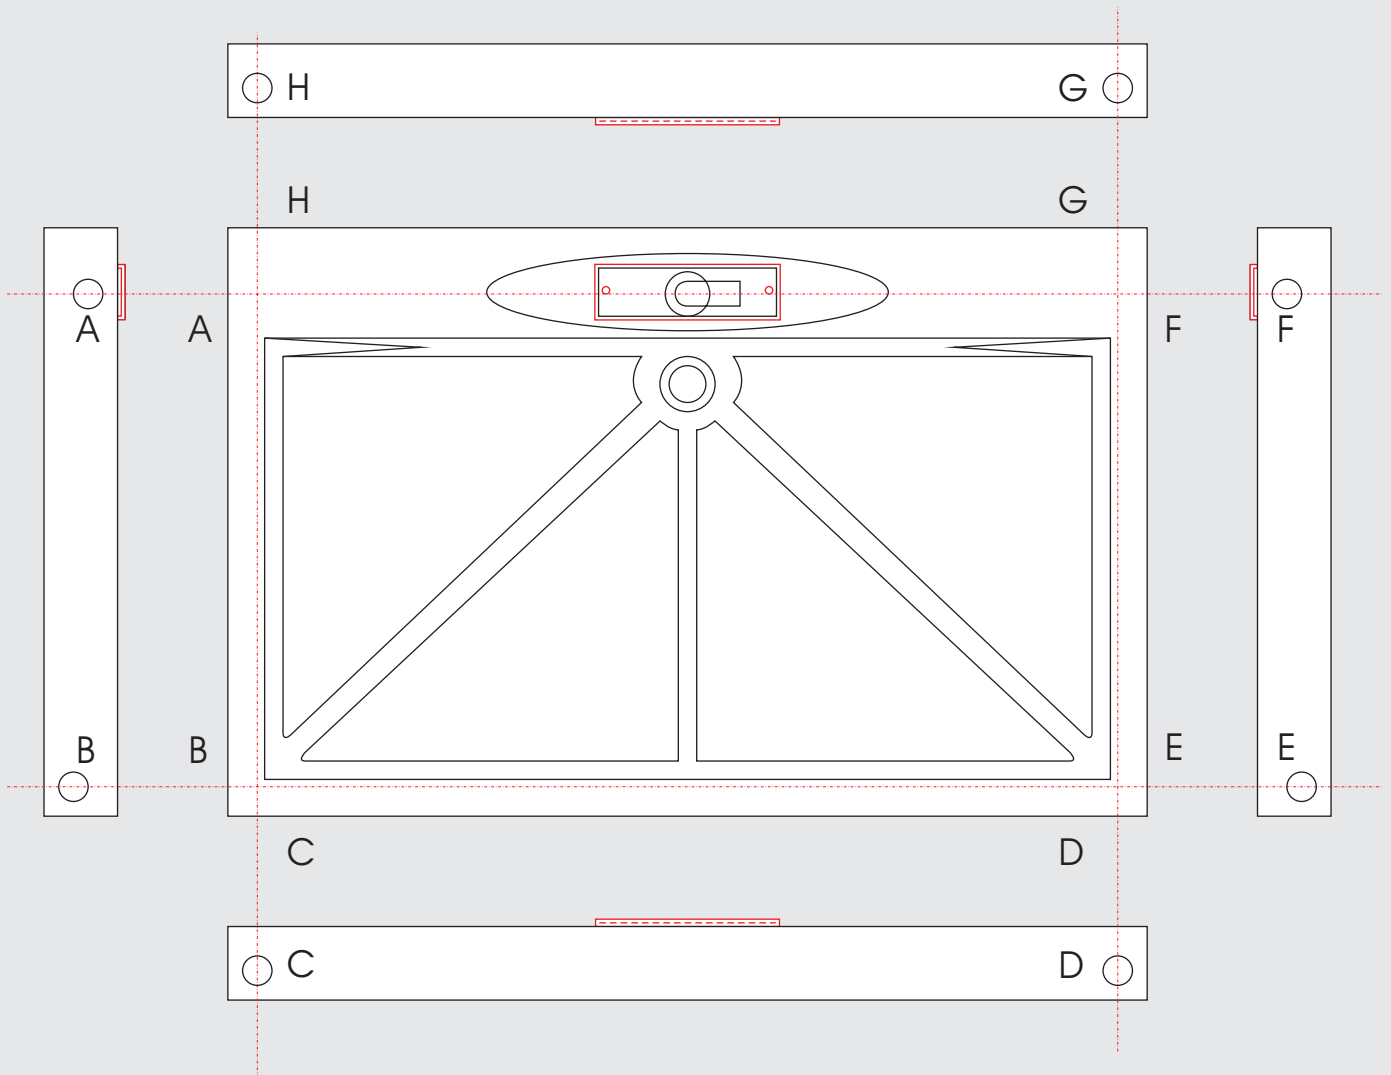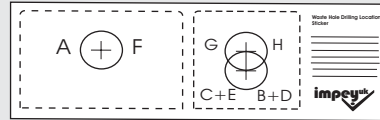

1. Decide which corner the waste pipe will exit. (This will determine which template you will need)
2. Place sticker over relevant corner.
3. Drill a 45-50mm diameter hole using the relevant circle as a guide.
4. Remove sticker.